


SASH LOCK INSTALLATION INSTRUCTIONS

The location of the lock and keeper is unique to each window and therefore, we have sent your replacement sash with the lock uninstalled. The original lock or locks must be removed and reapplied to the replacement sash using the appropriate colored self-drilling screws provided. This will require the use of a reversible power drill and a P-2 Phillips Head screw tip to fasten the self-drill screws to the new sash.

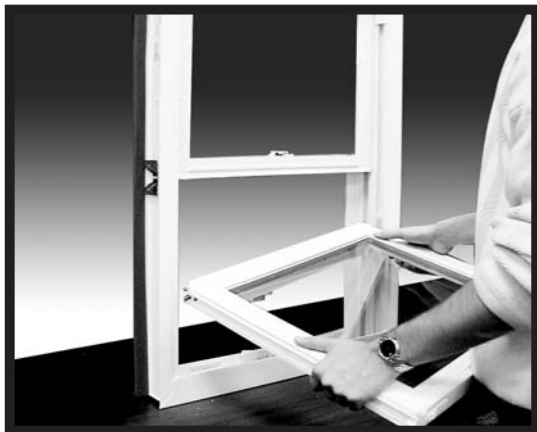

- 1.** Remove the original sash from window frame by tilting it inward completely and raising one side until it disengages from the carrier shoe. Now install replacement sash by holding it in a fully tilted position and aligning pivot pins into receptors of carrier shoes and pushing the raised side down until both sides are in alignment.

- 2.** Close the sash to normal operating position and lower it to its closed position. Verify that the rails across the mid-span of the window are in alignment. If so, remove the locks from the original sash. If not, verify that the sash is in the carrier shoes correctly. For help installing correctly, contact Customer Service.



- 3.** Place the lock onto the rail so that it is aligned with the keeper and proceed to turn the sweep to the left or locked position as shown. (Adjust the lock if necessary to be sure that it is straight.)

- 4.** Using the power drill, P-2 Phillips Head screw tip, and appropriate colored self-drilling screws provided, carefully fasten the lock to the rail starting with the right-hand mounting hole. Once the screw is snug, turn the sweep to the right, or unlocked, position and repeat using the left-hand mounting hole. Lock, unlock and operate the window to assure proper alignment

